



Let's start by setting Unit 2 AVR Mvar setpoint to 0 Mvar (i.e. a power factor of 1). See results in table below.

Total MW	U1				U2			
	MW	MVARs	p.f.	Current	MW	MVARs	p.f.	Current
56.50	39.55	31.70	0.78	4607.78	16.95	0.00	1.00	1541.01

