



NOTE: Setting Unit 2 to 0 Mvar causes Unit 1 operating point to be outside the limits of the capability diagram.

Total MW	U1				U2			
	MW	MVARs	p.f.	Current	MW	MVARs	p.f.	Current
56.50	39.55	31.70	0.78	4607.78	16.95	0.00	1.00	1541.01

