



NOTES
 STORAGE TANK ALARM SIGNALS ARE TAKEN BACK TO THE FIRE ALARM PANEL
 THE INTERNAL BELL WITHIN THE STORAGE TANK'S CONTROL PANEL IS NOT USED

COAL SILO AND PULVERISER CO2 SYSTEM (DRAWING NUMBER 8)